



CASUAL JACKET

Regular Fit Spec Charts


REGULAR FIT

Euro Size	Inch Size
42	34R
44	35R
46	37R
48	38R
50	40R
52	42R
54	43R
56	44R
58	46R
60	48R
62	50R
64	51R
66	52R
68	54R
70	55R

GARMENT MEASUREMENTS

CASUAL JACKET | REGULAR FIT | INCHES

Size Euro / Inch	A Back Length	C Shoulder Width	B 1/2 Chest	E 1/2 Waist	H 1/2 Seat	F Sleeve Outside*	D 1/2 Upperarm	G 1/2 Cuff
42 / 34R	23 1/4	17 1/8	20 1/4	19 7/8	18 7/8	22 5/8	7 3/8	5 3/8
44 / 35R	24	17 1/2	21 1/8	20 5/8	19 5/8	23 1/4	7 1/2	5 1/2
46 / 37R	24 3/4	18	21 7/8	21 1/2	20 1/2	23 7/8	7 3/4	5 5/8
48 / 38R	25 5/8	18 1/2	22 5/8	22 1/4	21 1/4	24 3/8	8	5 5/8
50 / 40R	26 3/8	19	23 3/8	23	22	25	8 1/4	5 3/4
52 / 42R	27 1/8	19 1/2	24 1/4	23 7/8	22 7/8	25 5/8	8 3/8	5 7/8
54 / 43R	28	19 7/8	25	24 5/8	23 5/8	26 1/8	8 5/8	5 7/8
56 / 44R	28 3/4	20 3/8	25 3/4	25 3/8	24 3/8	26 3/4	8 7/8	6
58 / 46R	29 1/2	20 7/8	26 5/8	26 1/8	25 1/4	27 3/8	9	6 1/8
60 / 48R	30 3/8	21 3/8	27 3/8	27	26	28	9 1/4	6 1/8
62 / 50R	30 3/4	21 3/4	28 1/8	27 3/4	26 3/4	28 1/4	9 1/2	6 1/4
64 / 51R	31 1/8	22 1/4	28 7/8	28 1/2	27 1/2	28 1/2	9 3/4	6 1/4
66 / 52R	31 1/2	22 3/4	29 3/4	29 3/8	28 3/8	28 3/4	9 7/8	6 3/8
68 / 54R	31 7/8	23 1/4	30 1/2	30 1/8	29 1/8	29	10 1/8	6 1/2
70 / 55R	32 1/4	23 3/4	31 1/4	30 7/8	29 7/8	29 3/8	10 3/8	6 1/2

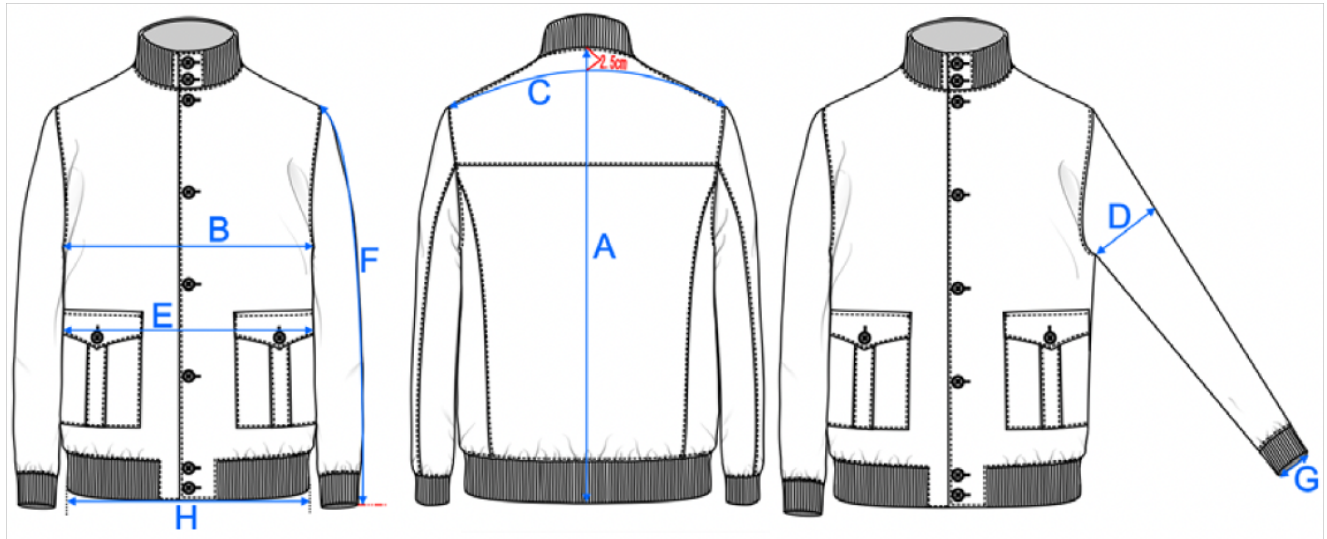


NOTES:

1/2 Cuff	Rib-Knit Cuffs will measure 4.1cm (1 5/8") smaller than Self-Fabric Cuffs
	Elasticized Cuffs will measure 1.6cm (5/8") smaller than Self-Fabric Cuffs
1/2 Seat (Bottom)	Rib-Knit Hem will measure 9cm (3 1/2") smaller than Self-Fabric Hem
	Elasticized Hem will measure 2.5cm (1") smaller than Self-Fabric Hem
1/2 Waist	Exact Position is 42cm (16 1/2") down from center back neck seam

GARMENT MEASUREMENTS

CASUAL JACKET | REGULAR FIT | CENTIMETERS

Size Euro / Inch	A Back Length	C Shoulder Width	B 1/2 Chest	E 1/2 Waist	H 1/2 Seat	F Sleeve Outside*	D 1/2 Upperarm	G 1/2 Cuff
42 / 34R	59.0	43.4	51.5	50.5	48.0	57.5	18.6	13.8
44 / 35R	61.0	44.6	53.5	52.5	50.0	59.0	19.2	14.0
46 / 37R	63.0	45.8	55.5	54.5	52.0	60.5	19.7	14.2
48 / 38R	65.0	47.0	57.5	56.5	54.0	62.0	20.3	14.4
50 / 40R	67.0	48.2	59.5	58.5	56.0	63.5	20.8	14.6
52 / 42R	69.0	49.4	61.5	60.5	58.0	65.0	21.4	14.8
54 / 43R	71.0	50.6	63.5	62.5	60.0	66.5	21.9	15.0
56 / 44R	73.0	51.8	65.5	64.5	62.0	68.0	22.5	15.2
58 / 46R	75.0	53.0	67.5	66.5	64.0	69.5	23.0	15.4
60 / 48R	77.0	54.2	69.5	68.5	66.0	71.0	23.6	15.6
62 / 50R	78.0	55.4	71.5	70.5	68.0	71.7	24.1	15.8
64 / 51R	79.0	56.6	73.5	72.5	70.0	72.4	24.7	16.0
66 / 52R	80.0	57.8	75.5	74.5	72.0	73.1	25.2	16.2
68 / 54R	81.0	59.0	77.5	76.5	74.0	73.8	25.8	16.4
70 / 55R	82.0	60.2	79.5	78.5	76.0	74.5	26.3	16.6

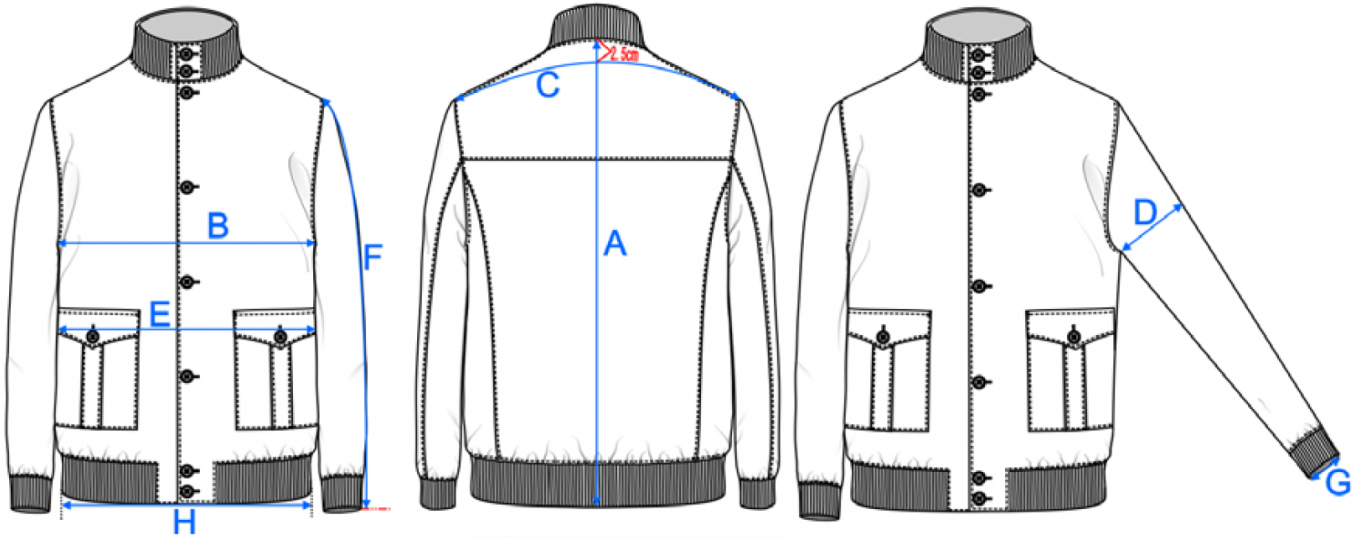

NOTES:

1/2 Cuff	Rib-Knit Cuffs will measure 4.1cm (1 5/8") smaller than Self-Fabric Cuffs
	Elasticized Cuffs will measure 1.6cm (5/8") smaller than Self-Fabric Cuffs
1/2 Seat (Bottom)	Rib-Knit Hem will measure 9cm (3 1/2") smaller than Self-Fabric Hem
	Elasticized Hem will measure 2.5cm (1") smaller than Self-Fabric Hem
1/2 Waist	Exact Position is 42cm (16 1/2") down from center back neck seam